 




Polaroid S10 Speaker Replacement

This guide will show how to replace any bad speakers in the Polaroid S10.

Written By: James

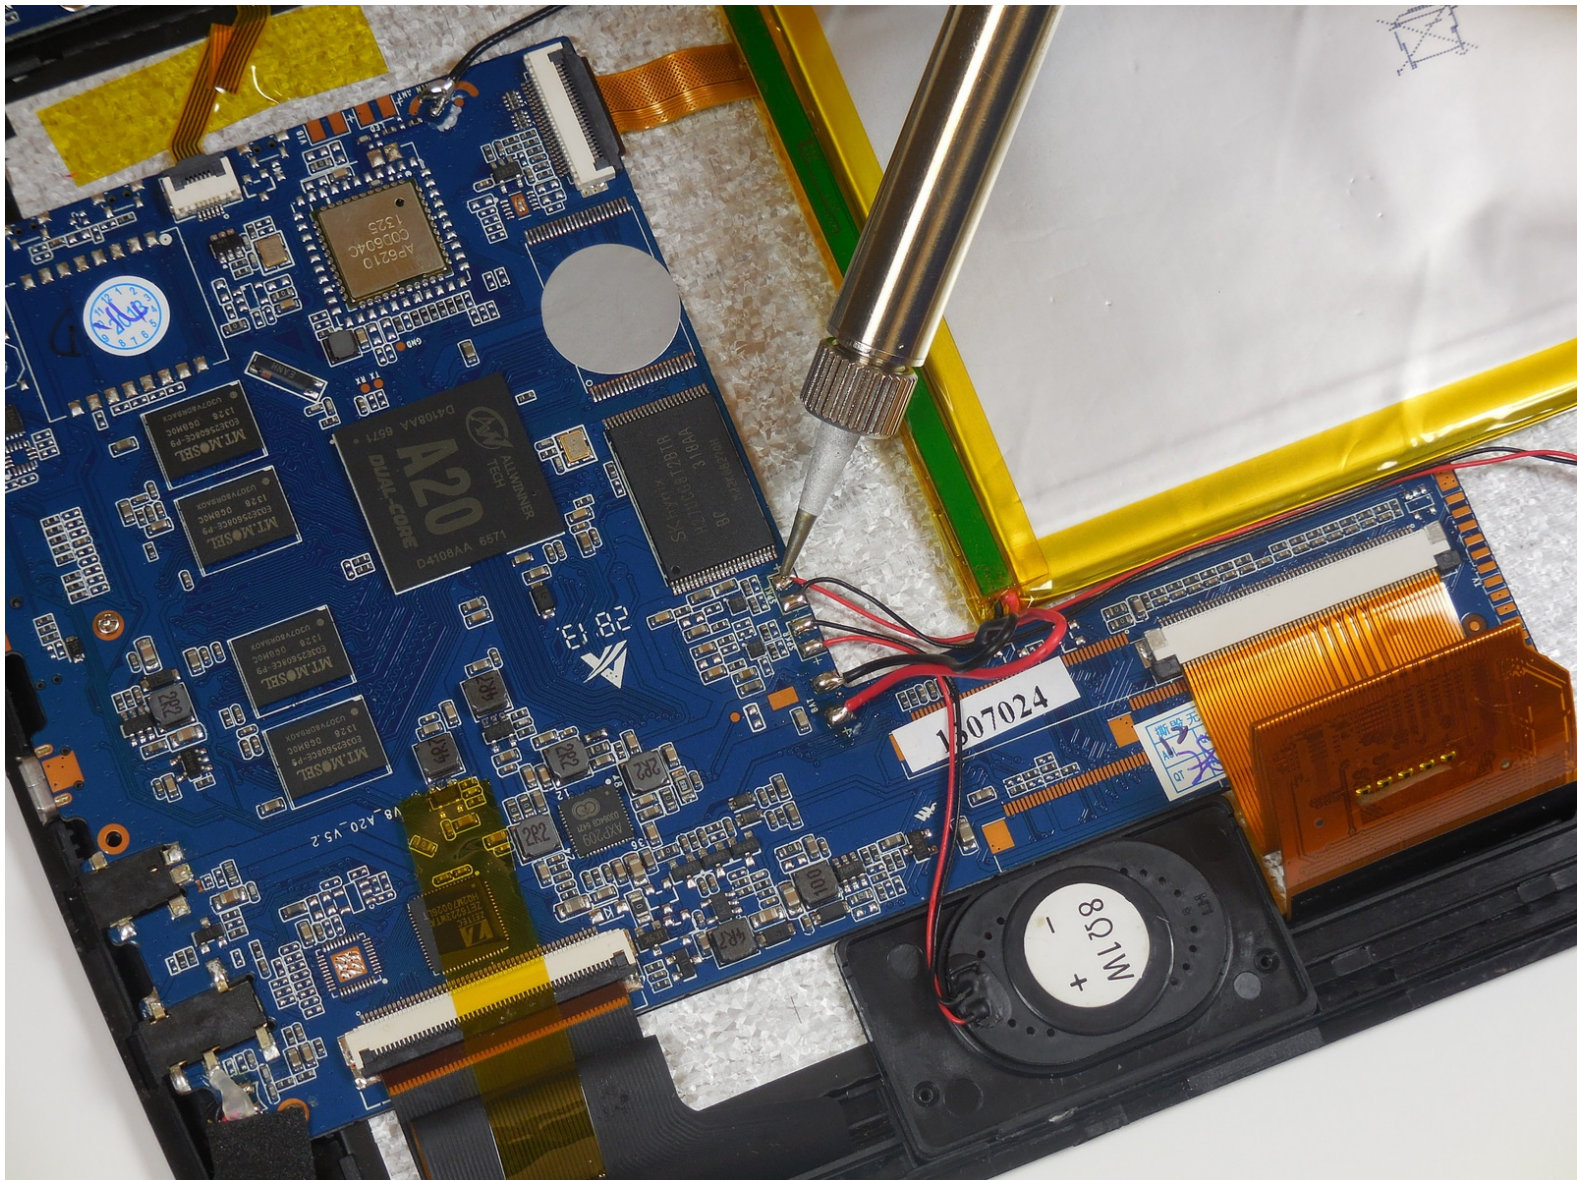

INTRODUCTION

People like to play their music and sometimes they play it too loud and it blows out their speakers. This will show you how to replace them.



TOOLS:

- [Soldering Station](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Spudger](#) (1)
 - [Metal Spudger Set](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Removing the backcover





- Place an opening pick between the volume button and the back cover.
- ⓘ More than one pick may be needed but avoid placing more than two in the space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully use the metal spundger to remove the back cover.
- ⓘ A plastic snap noise is normal due to the tabs on the back cover.

Step 2 — Speaker Assembly



- Use a heavy-duty nylon spudger to remove the tape.
- Unscrew the four 5 mm screws with the J000 screwdriver that connects the speakers.

Step 3 — Desoldering the Speakers

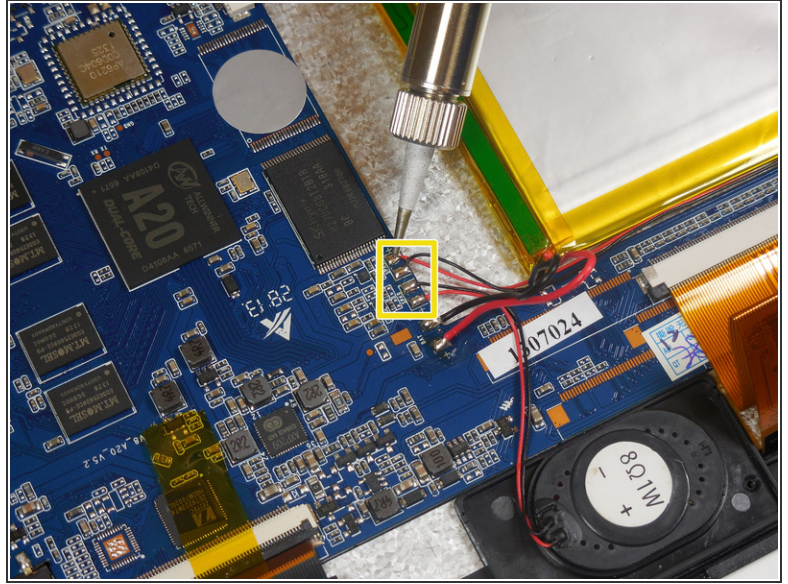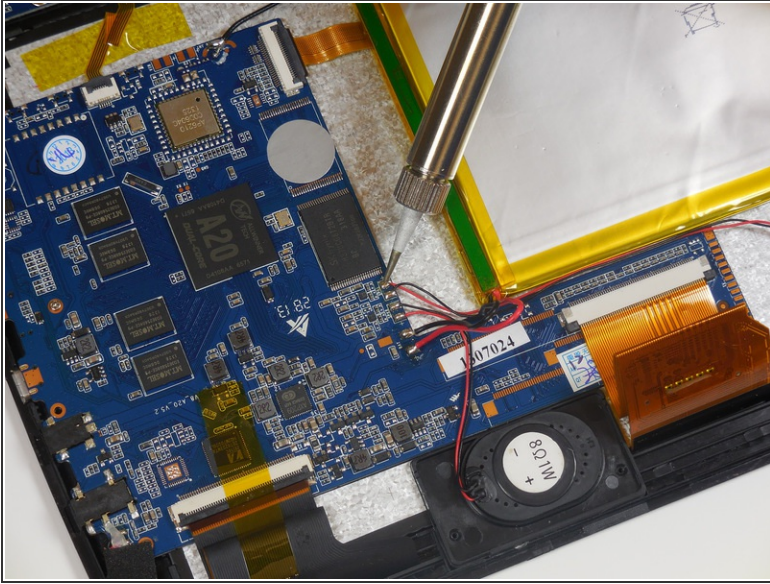

- Carefully desolder the 4 connections of the speakers.

⚠ Do not touch the soldering iron to the motherboard or LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-01 12:42:23 PM.